

CLEANING & MAINTENANCE GUIDE

For Neboard Decorative Surface Panels

1. General Recommendations

- Regular cleaning helps maintain the surface appearance and extend the product's lifespan.
- Always use mild cleaning methods first; avoid aggressive cleaning unless absolutely necessary.
- Test any new cleaning agent on an inconspicuous area before full application.

2. Routine Cleaning

- Wipe the surface with a **soft, damp cloth** using clean water.
- For stubborn dirt, use a **mild, pH-neutral detergent** diluted in water.
- Dry the surface immediately with a clean, soft cloth to avoid water marks.

3. Do Not Use

- Abrasive sponges, steel wool, or scouring pads.
- Harsh chemicals such as bleach, ammonia, acetone, or solvent-based cleaners.
- High-pressure washers or steam cleaners directly on the surface.
- Sharp tools or scrapers that may scratch or damage the surface layer.

4. Special Care for High-Gloss & Mirror Finishes

- Use a **microfiber cloth** to avoid fine scratches.
- Avoid circular rubbing; wipe in straight, gentle motions.
- Never use glass cleaners containing ammonia directly on the panel surface.

5. Special Care for Synthetic Leather Surfaces

- Use a **soft cloth** with a mild soap solution for cleaning.
- Remove stains immediately to avoid permanent marks.
- Do not expose the surface to direct sunlight for extended periods to prevent fading.
- Avoid oil-based cleaning agents, as they may damage the leather coating.

6. Preventive Maintenance

- Keep surfaces away from direct heat sources (> 60°C / 140°F).
- Avoid prolonged exposure to moisture or standing water.
- Use protective pads or covers in high-contact areas.
- For panels in commercial spaces, schedule periodic professional cleaning.
- Store panels flat to prevent warping.

7. Repairs

- Damaged panels should be replaced; repairs may be visible and affect aesthetics.
- Contact the manufacturer or supplier for approved repair and maintenance solutions.